



**6 x 10 Insulated  
10 FT. Stand**

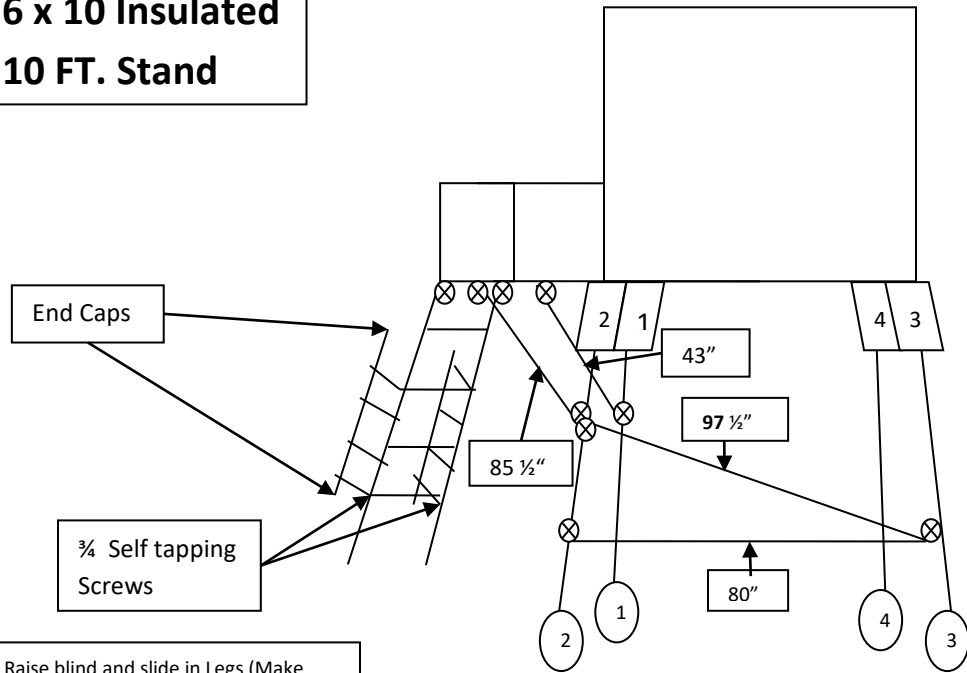

- 25- 1 1/4" x 3/8" Bolts
- 2 - 3" x 3/8" Bolts
- 27- Nuts
- 4- Washers
- 4- End Caps
- 22- 3/4" self tapping

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- 85 1/2" Brace #1 Leg to Tab under Platform – 58" Brace #2 Leg to Hole on outside edge of platform.
- Use 6 of the 3/4" self tapping screws for the top step extension.
- ⊗ -Marks 1" x 3/8" Bolts.

***BRACES: 2-80", 2-97 1/2", 4- 134 1/2", 2-129 1/2",  
1- 85 1/2" & 1-43"***

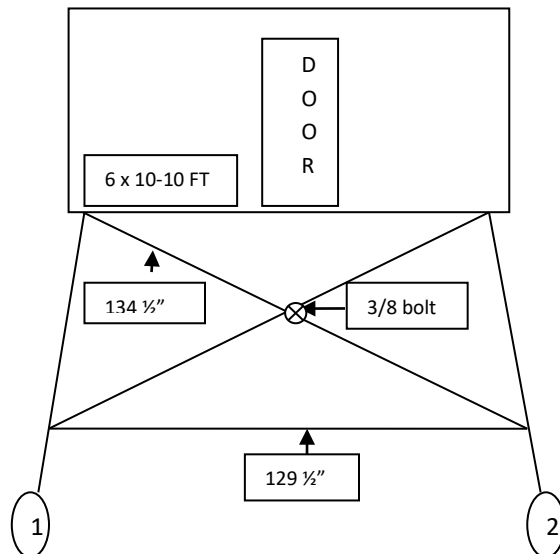

- TOOLS NEEDED**
- 9/16" Wrench
  - 9/16" Socket and Ratchet
  - 3/8 and 5/16 Hex Tips
  - Cordless Drill