


6 x 6 Insulated 10 Ft. Stand

End Caps

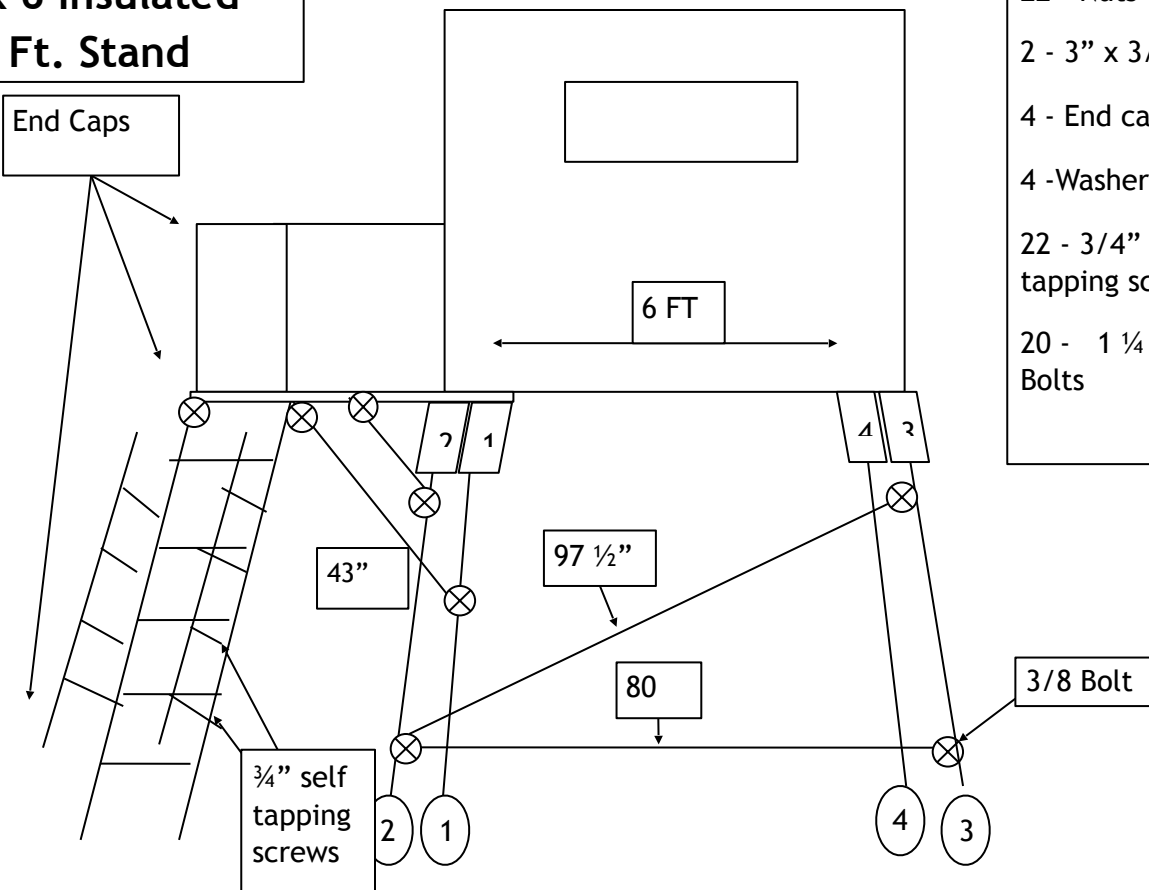

22 - Nuts

2 - 3" x 3/8" Bolts

4 - End caps


4 - Washers

22 - 3/4" self
tapping screws

20 - 1 1/4" x 3/8"
Bolts

Braces: 4) 80" 2) 97 1/2" 2) 43" & 2) 99

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Install 43" braces from leg#1 & #2 to Platform using 3/8" bolt.
- Use 6 of the 3/4" self tapping screws for the top step extension.

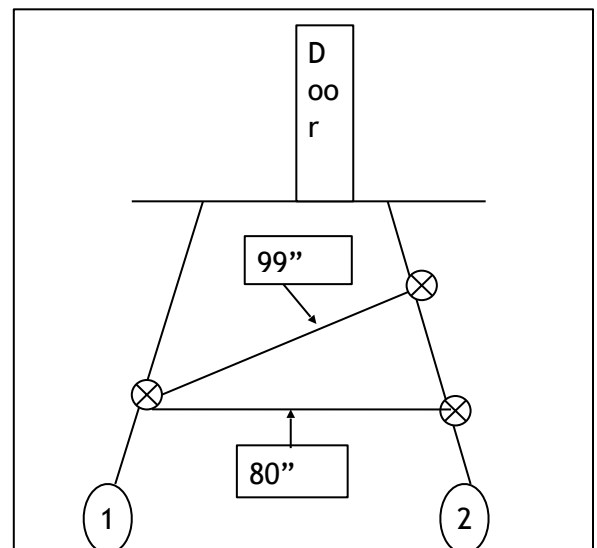

TOOLS NEEDED

- 9/16" Wrench
- 9/16" Socket and Ratchet
- 3/8 and 5/16 Hex Tips