


**6 x 8 -5 Ft.**

End Caps

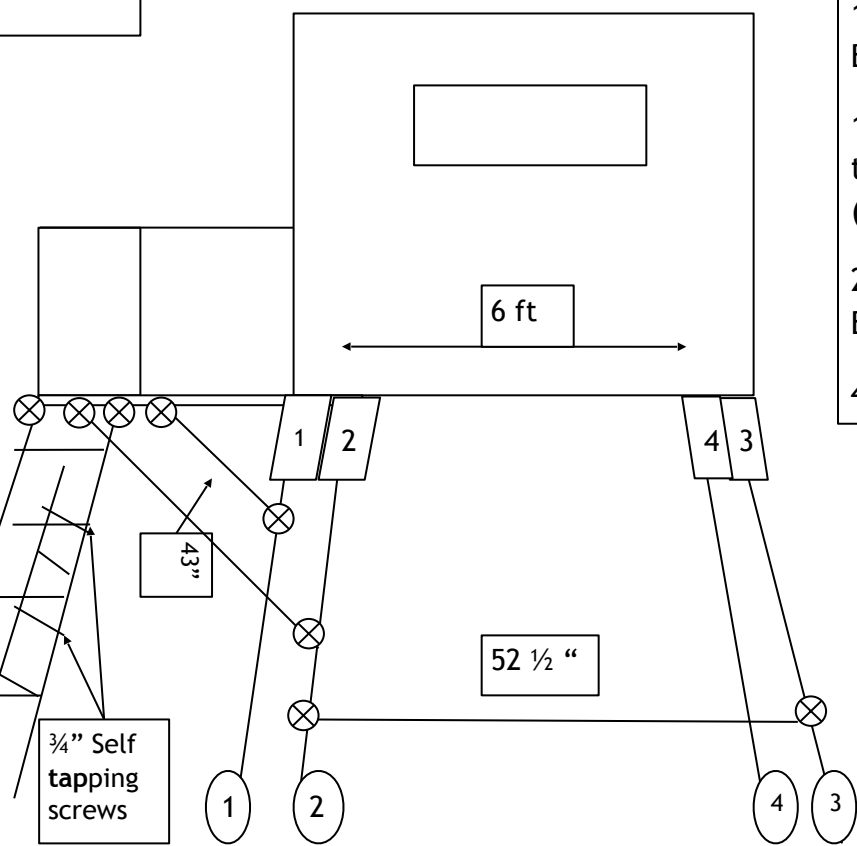

- 4 - End Caps
- 17 - 1 1/4 " x 3/8" Bolts
- 14 - 3/4" self tapping screws (brown)
- 2 - 3" x 3/8" Bolts
- 4 - Washers

**" Braces: 2 - 52 1/2 " , 2 - 70" & 2 - 43"**  
**Legs are numbered on bottom to match.**

- TOOLS NEEDED**
- 9/16" Wrench
  - 9/16" Socket and Ratchet
  - 3/8 and 5/16 Hex Tips

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
-  Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Install 43" braces from leg#1 & #2 to Platform using 3/8"

