


**4 x 6 Economy
8 ft Stand**

- 20 - 1" x 3/8" Bolts
- 2 - 2 1/2" x 3/8" Bolts
- 4- Washers
- 22- Nuts
- 12 - 3/4" self tapping screws (brown)
- 4 - End Caps
- 6 - 1 1/4" self tapping screws (silver)

2 1/2" x 3/8 Bolt & Washer -on both sides

End Caps

3/4" Self Tapping Screws/ handrail to ladder

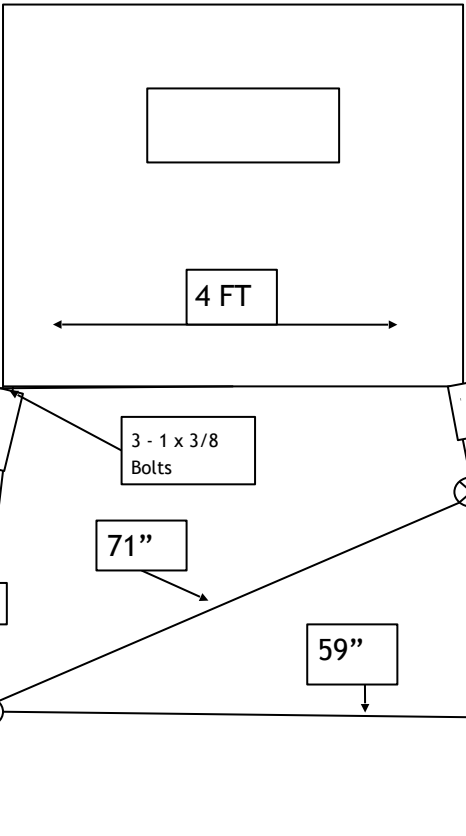

3 - 1 x 3/8 Bolts

1 1/4" Self Tapping Screws

- Tools Needed**
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips

Leg #1- left side of door & Leg #2 - Right side of door

- Bolt Platform in the Slots on Front of Blind; use 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Legs into Stubs while holding legs, put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts

