


# 5 x 6 Economy


## 5 ft Stand

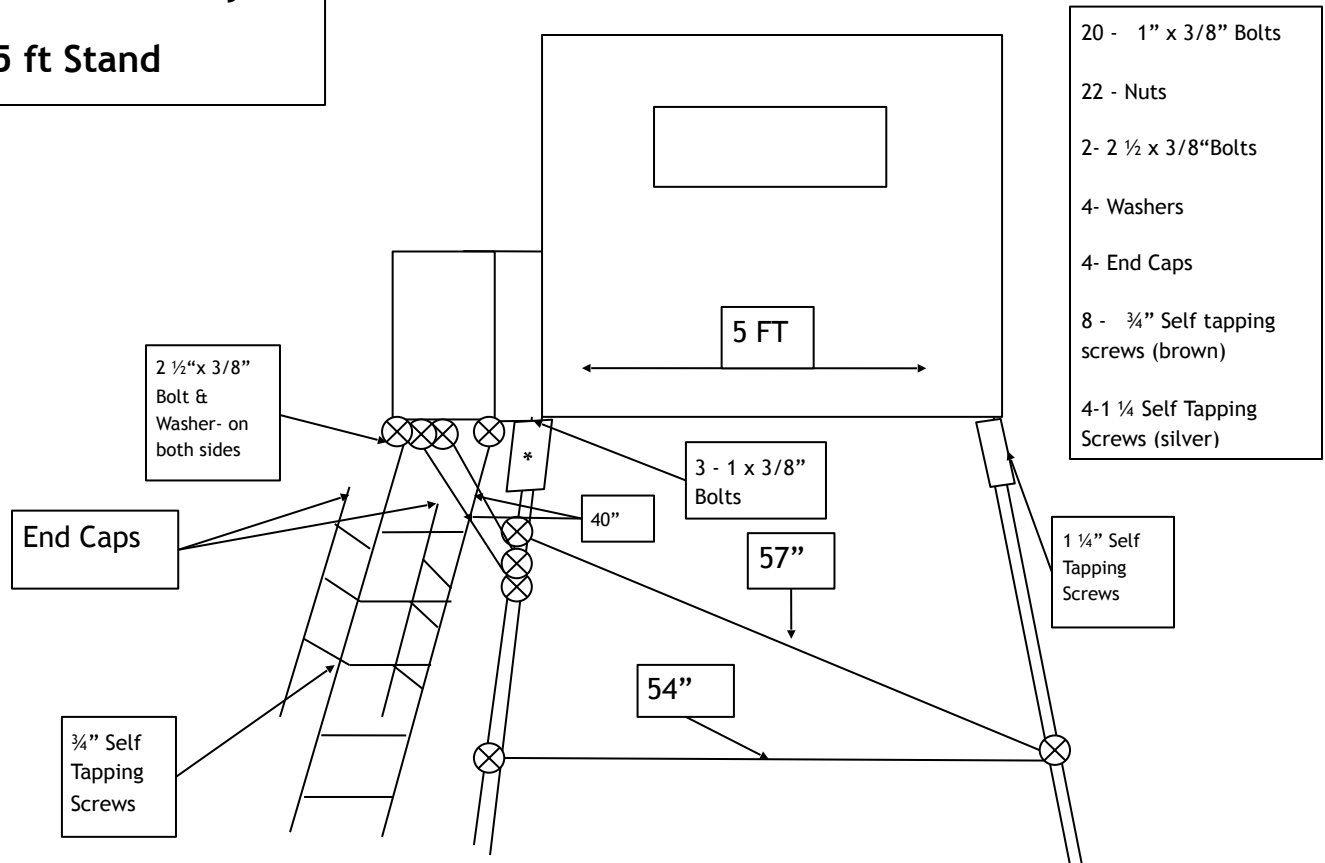

Leg # 1- Left side of door & Leg # 2 - Right side of

**Braces: 2-66, 2- 64 1/2, 2-57, 2-54 &**

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

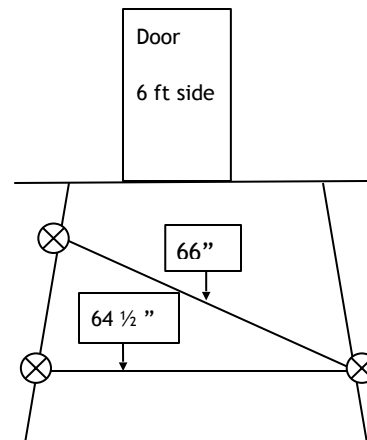

### Tools Needed

- 9/16 Wrench
- 9/16 Socket and Ratchet
- 3/8 and 5/16 Hex Tips