


**6 x 10 -5 Ft.
Stand Insulated**


End Caps

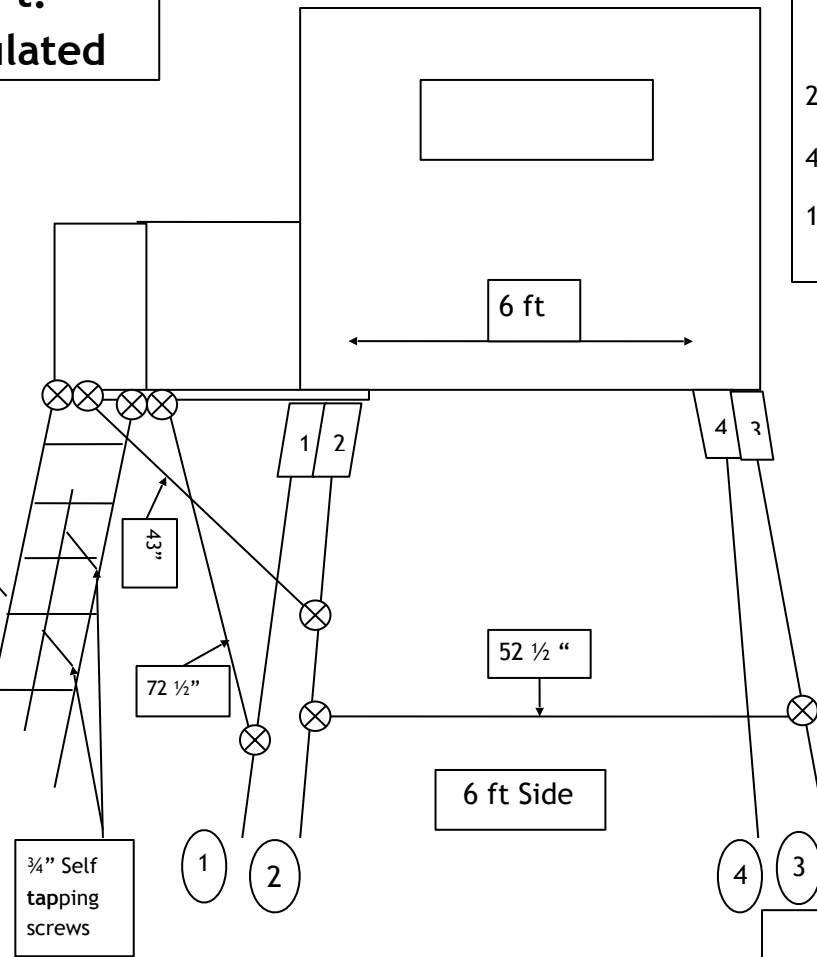

- 4 - End Caps
- 17 - 1 1/4" x 3/8" Bolts
- 14 - 3/4" self tapping
Screws (brown)
- 2 - 3"x 3/8" Bolts
- 4 - Washers
- 19 - Nuts

Braces: 2-52 1/2", 2 - 101", 1-72 1/2" & 1- 43"

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Install 43" braces from leg#1 & 60" Brace from leg #2 to

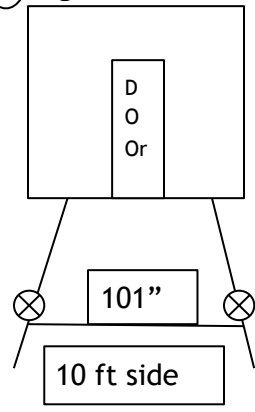

- TOOLS NEEDED**
- 9/16" Wrench
 - 9/16" Socket and Ratchet
 - 3/8 and 5/16 Hex Tips