


6 x 6 Economy 12 Ft. Stand

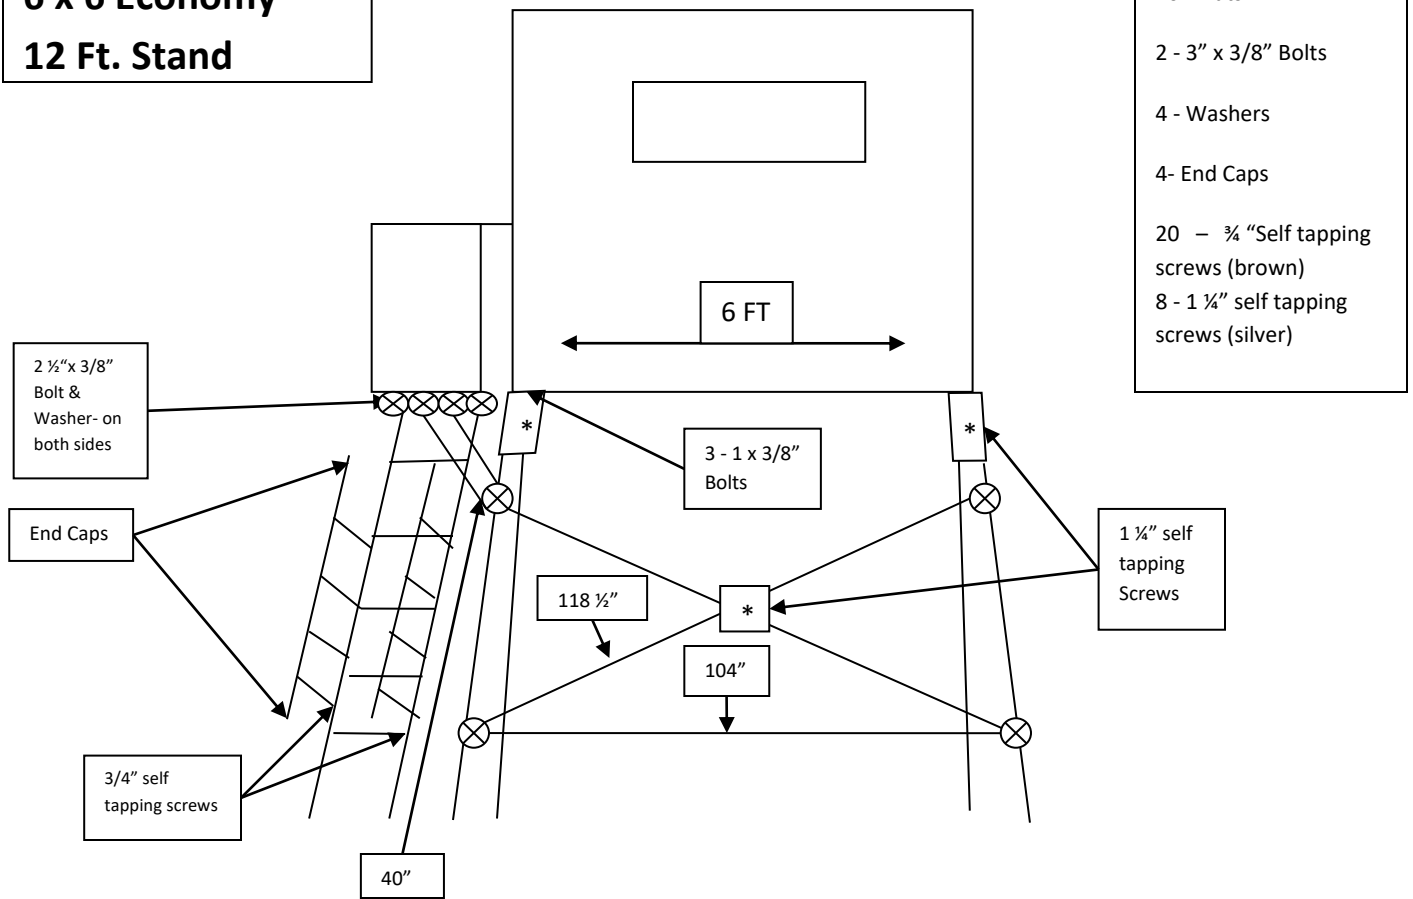

- 24- 1" x 3/8" Bolts
- 26 - Nuts
- 2 - 3" x 3/8" Bolts
- 4 - Washers
- 4- End Caps
- 20 - 3/4" Self tapping screws (brown)
- 8 - 1 1/4" self tapping screws (silver)

2 1/2" x 3/8" Bolt & Washer- on both sides

End Caps

3/4" self tapping screws

40"

3 - 1 x 3/8" Bolts

118 1/2"

104"

1 1/4" self tapping Screws

Leg #1- Left side of door & Leg #2 - Right side of door

- Bolts Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail
- Raise Ladder and Fasten.
- ⊗ - - Marks 1" x 3/8" Bolts
- * -Marks Self Tapping Screws

- ### Tools Needed
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill