


**6 x 6 Insulated
15 Ft. Stand**

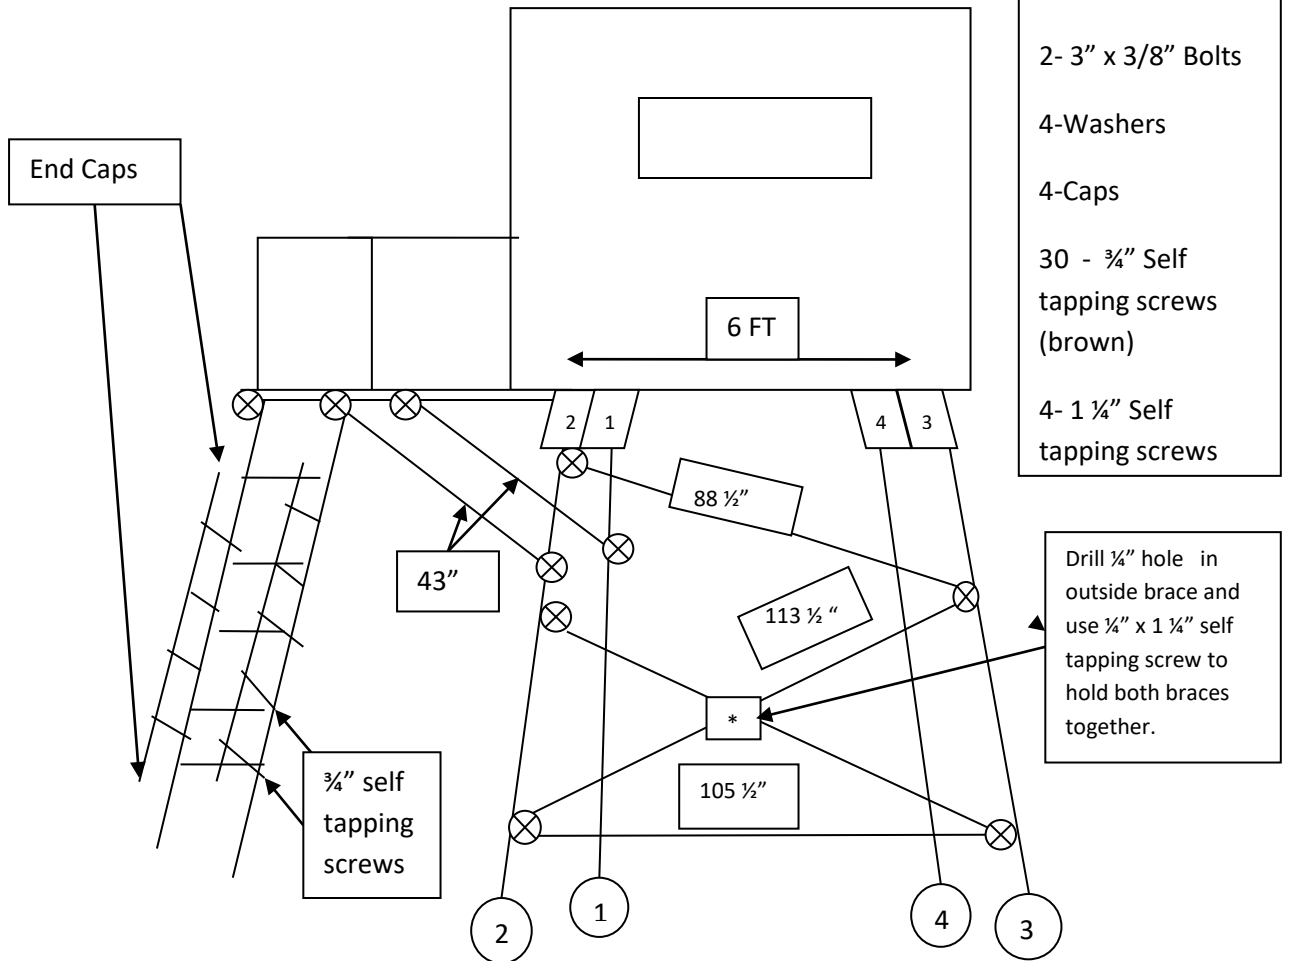

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 3/8" Bolts
- Install 43" braces from leg#1 & #2 to Platform using 3/8" bolt.
- Use 6 of the 3/4" self tapping screws for the top step extension.
- Left & Right handrail for ladder install with self tapping screws.
- ⊗ -- Marks 1" x 3/8" Bolts
- *- Marks 1 1/4" Self Tapping Screws
- 6- 3/4" self tapping screws are for the top step extension.
- Staircase takes 3" Bolts w/washers

Braces: 4- 88 1/2", 8- 113 1/2", 4- 105 1/2", 2- 43"

- TOOLS NEEDED**
- 9/16" Wrench
 - 9/16" Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill