


**4 x 6 10 ft  
Economy Stand**

- 24- 1" x 3/8" Bolts
- 26 - Nuts
- 2- 3 x 3/8" Bolts
- 4- Washers
- 4- End Caps
- 20- 3/4" Self tapping screws (brown)
- 8- 1 1/4" Self Tapping

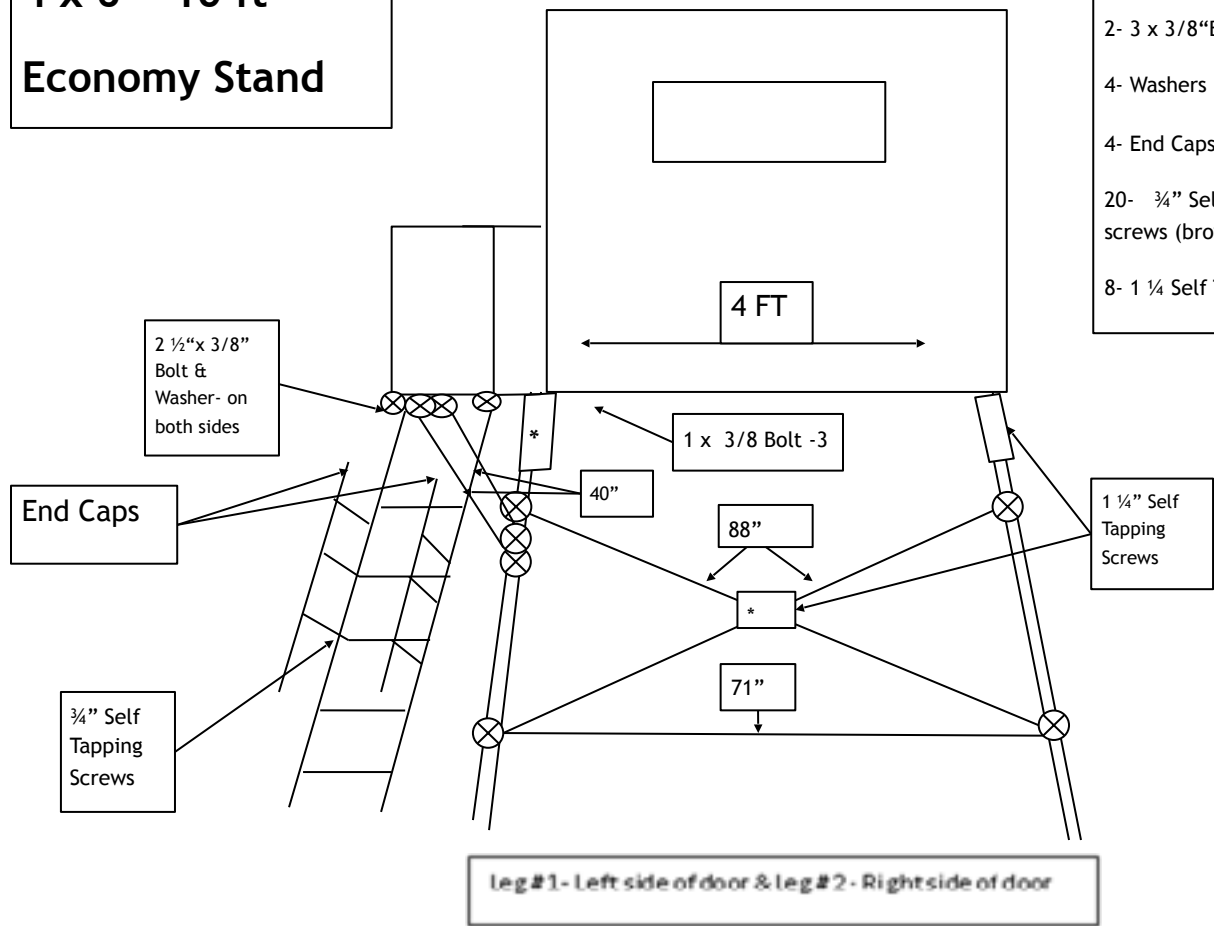

**Braces: 4-104, 2-71, 4-88, 2-94 & 2-40**

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

