


4 x 6 Economy 5 Ft. Stand

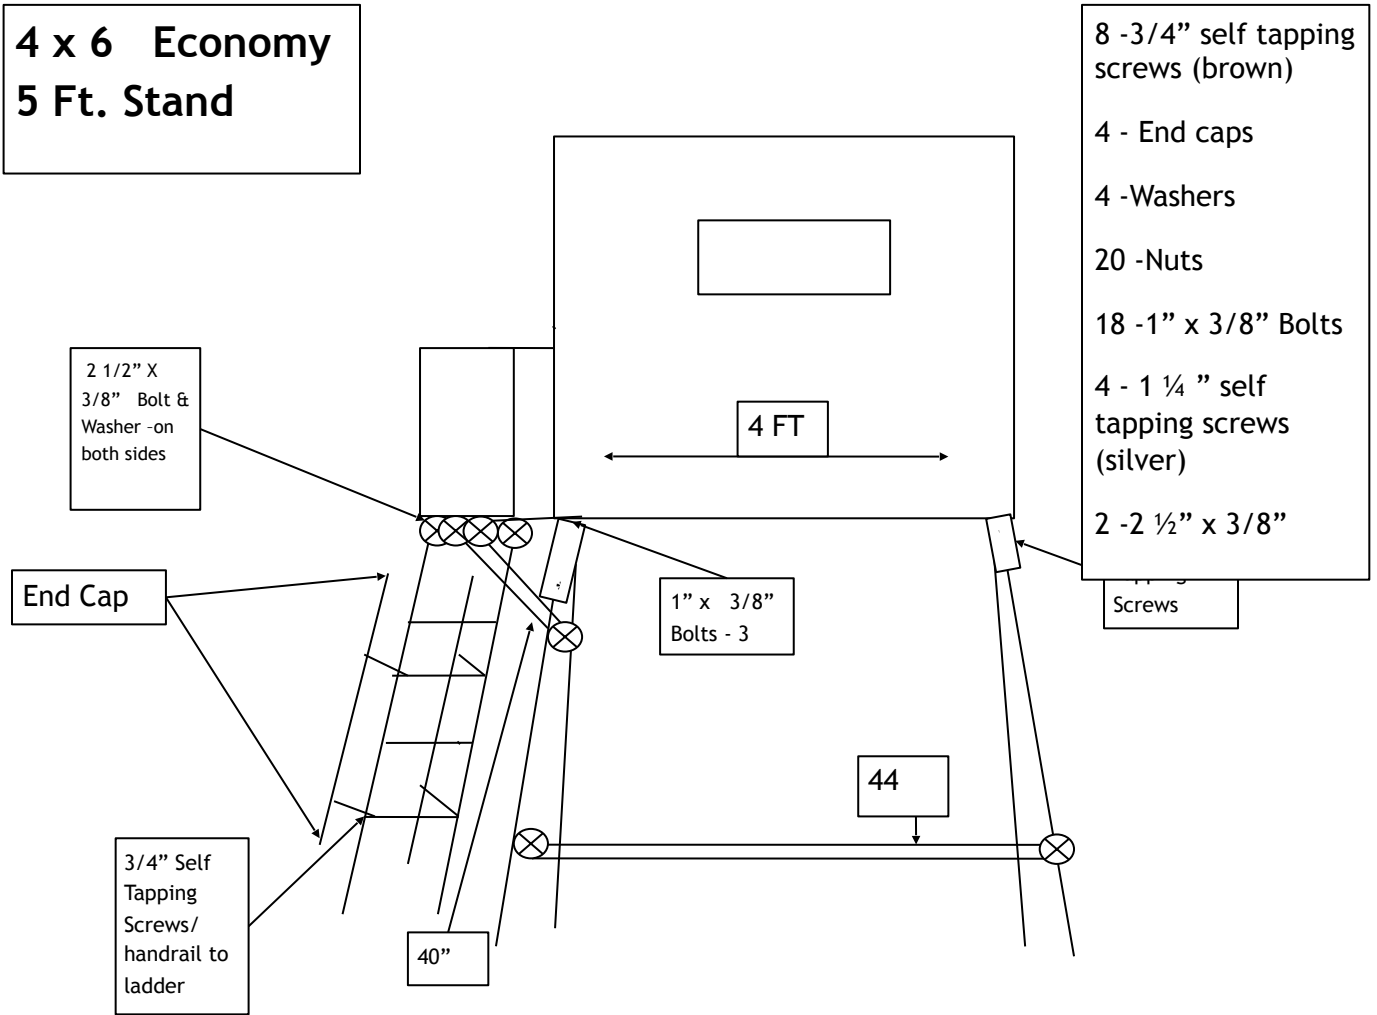

- 8 - 3/4" self tapping screws (brown)
- 4 - End caps
- 4 - Washers
- 20 - Nuts
- 18 - 1" x 3/8" Bolts
- 4 - 1 1/4" self tapping screws (silver)
- 2 - 2 1/2" x 3/8"

Screws

Leg#1- Left side of door & Leg#2- Right side of door

- Bolt Platform in the Slots on Front of Blind; use 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put * 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

Tools Needed

- 9/16 Wrench
- 9/16 Socket and Ratchet
- 3/8 and 5/16 Hex Tips
- Cordless Drill

