


6 x 6 Economy

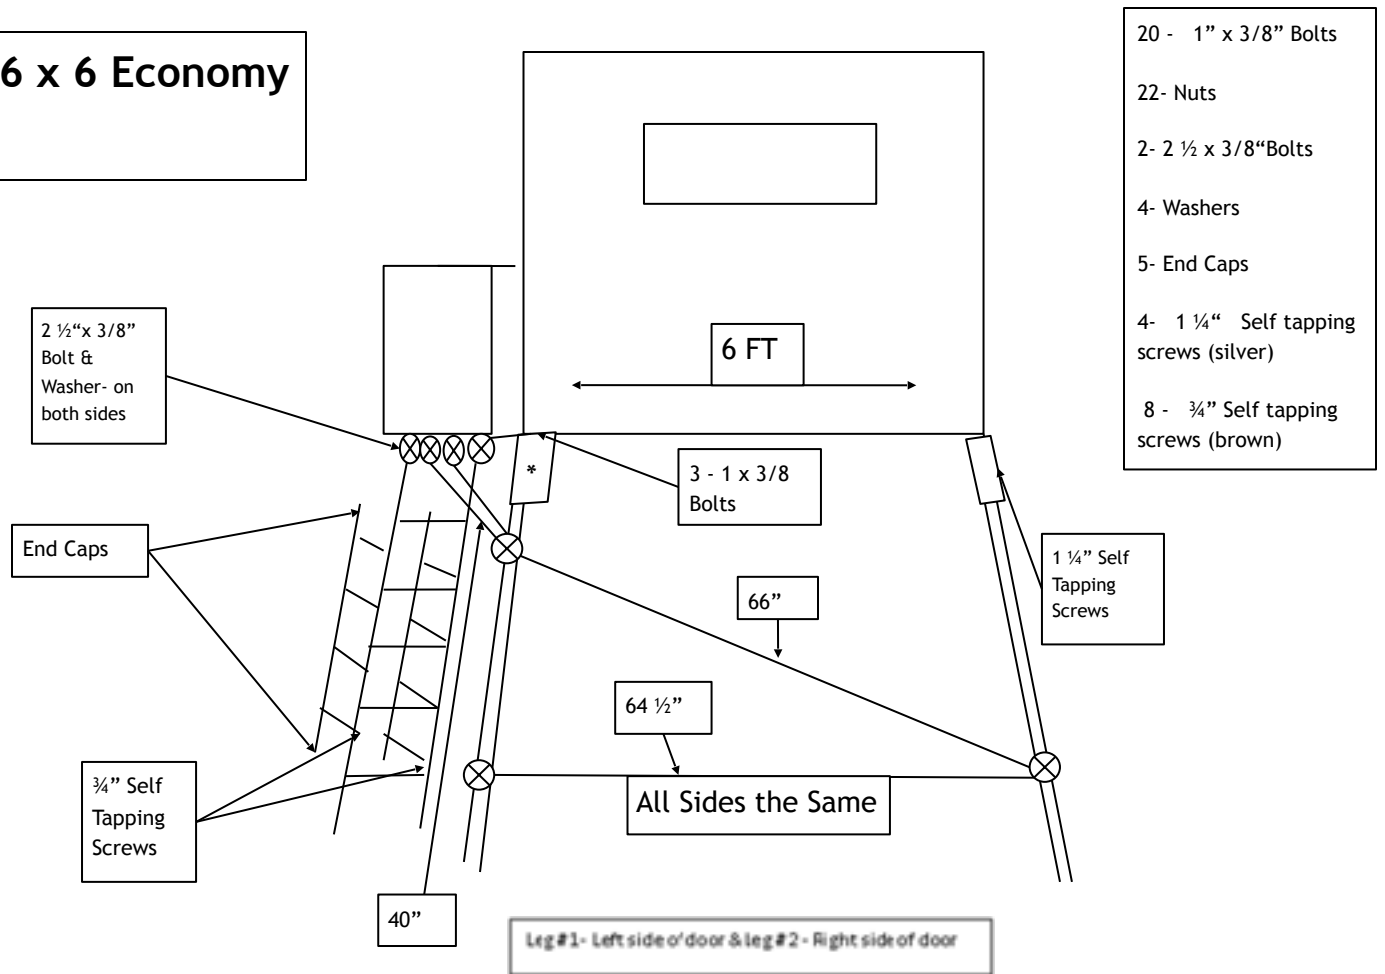

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

- Tools Needed**
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips