


# 6 x 6 Economy 8 Ft. Stand

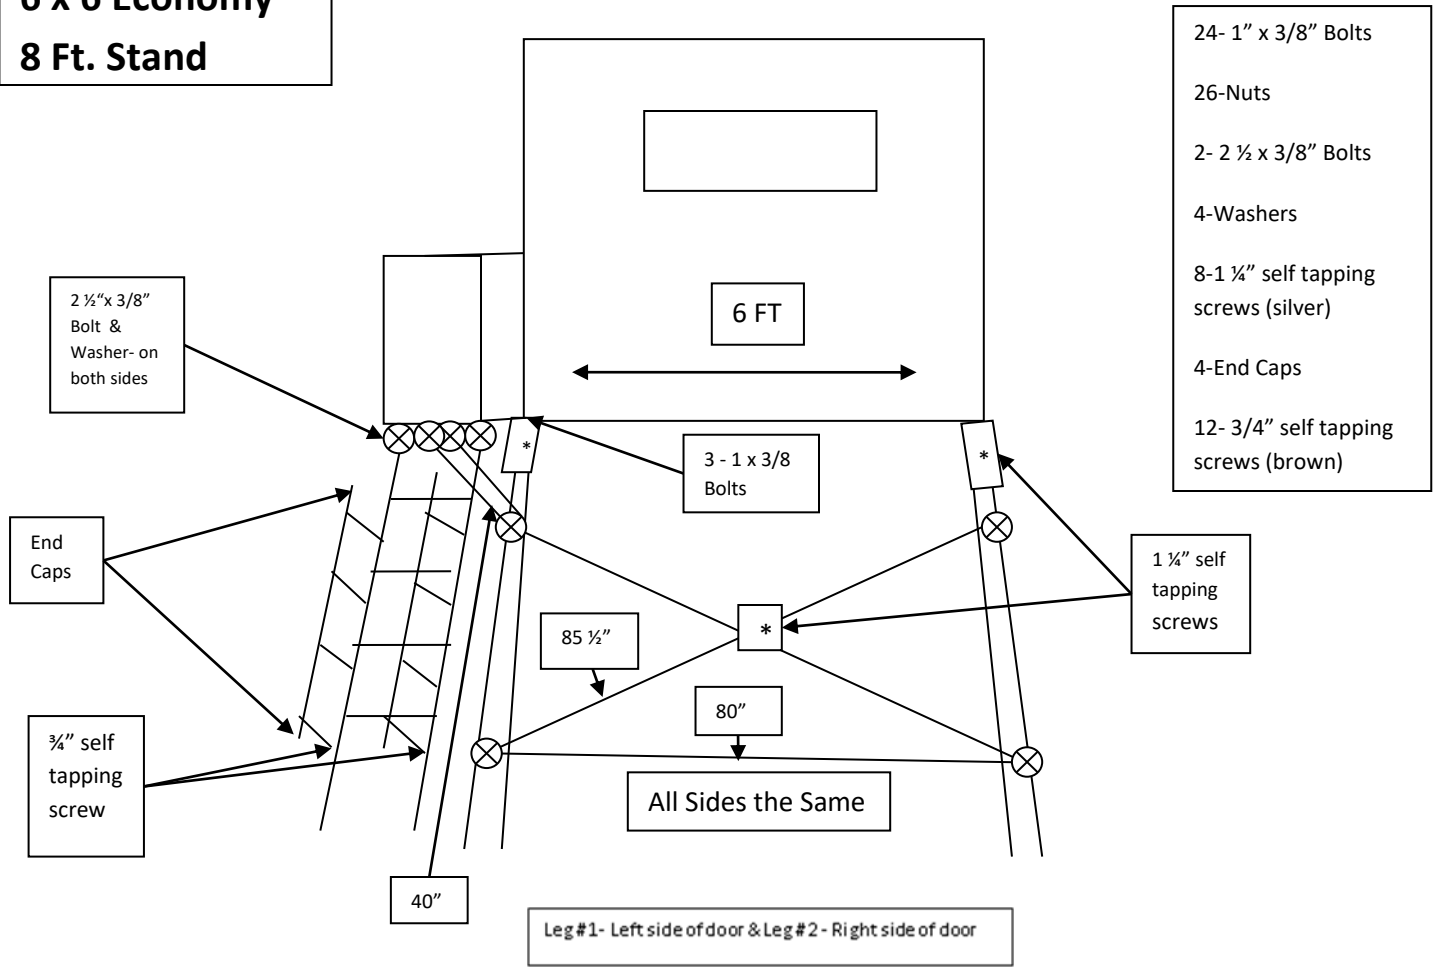

- 24- 1" x 3/8" Bolts
- 26-Nuts
- 2- 2 1/2 x 3/8" Bolts
- 4-Washers
- 8- 1 1/4" self tapping screws (silver)
- 4-End Caps
- 12- 3/4" self tapping screws (brown)

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail
- Raise Ladder and Fasten.
- -- Marks 1" x 3/8" Bolts
- ⊗ Marks Self Tapping Screws

- Tools Needed
- 9/16 Wrench
  - 9/16 Socket and Ratchet
  - 3/8 and 5/16 Hex Tips
  - Cordless Drill