


## 8 x 8 -5 Ft. Stand Insulated Blind

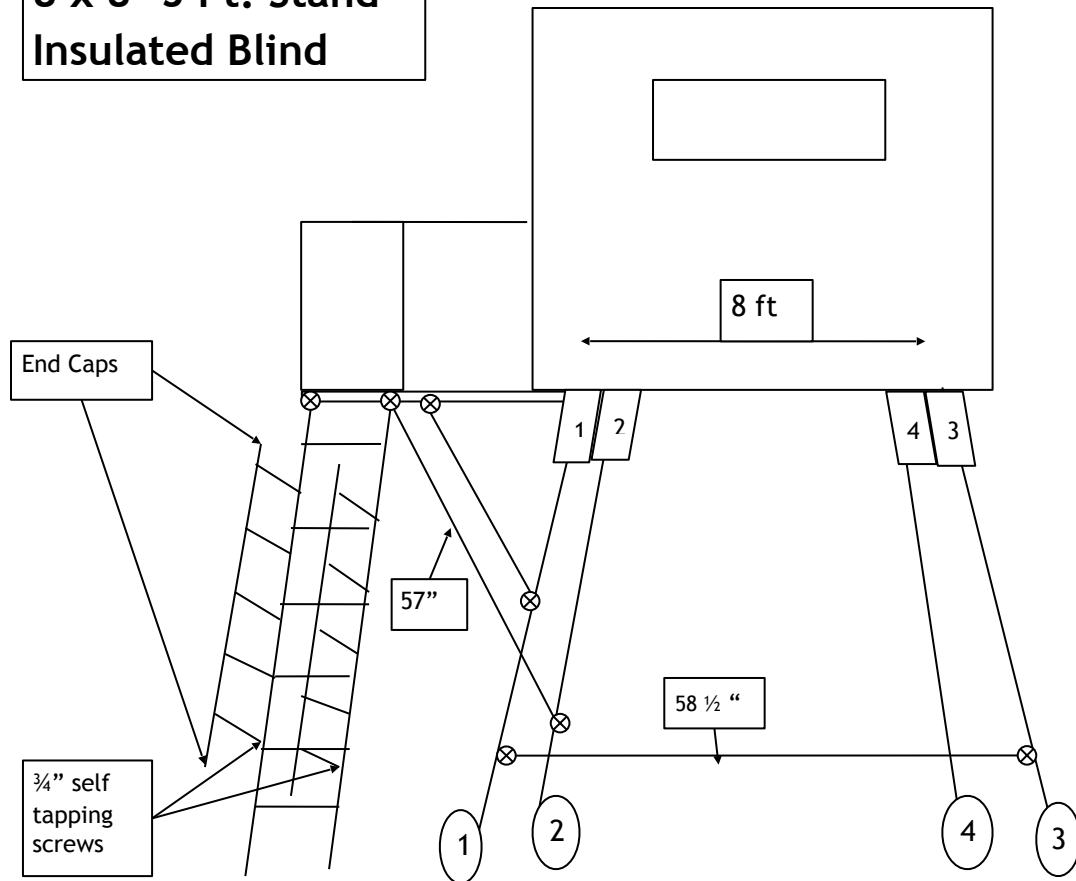

- 8- 1" x 1/2" Bolts
- 8- Nuts 1/2"
- 8- 1" x 3/8" Bolts
- 10 - 3/8" Nuts
- 2- 3"x 3/8" Bolts
- 14 - 3/4" self tapping screws (brown)
- 4 - Washers
- 4 - End Caps

- Raise blind and slide in Legs (Make sure leg is in all the way)
- Lower 2" Off Ground
- Install All Braces (Leave Loose)
- Set blind on Level surface
- Pull out on All Legs to Settle The Blind
- Tighten All Bolts
- Raise Platform Install 5- 1/2" Bolts
- Install 57" braces from leg #1 & #2 to Platform using 3/8" bolt.

### TOOLS NEEDED

- 3/4" Wrench
- 3/4" Socket and Ratchet