



4 x 6 Economy 5 Ft. Stand

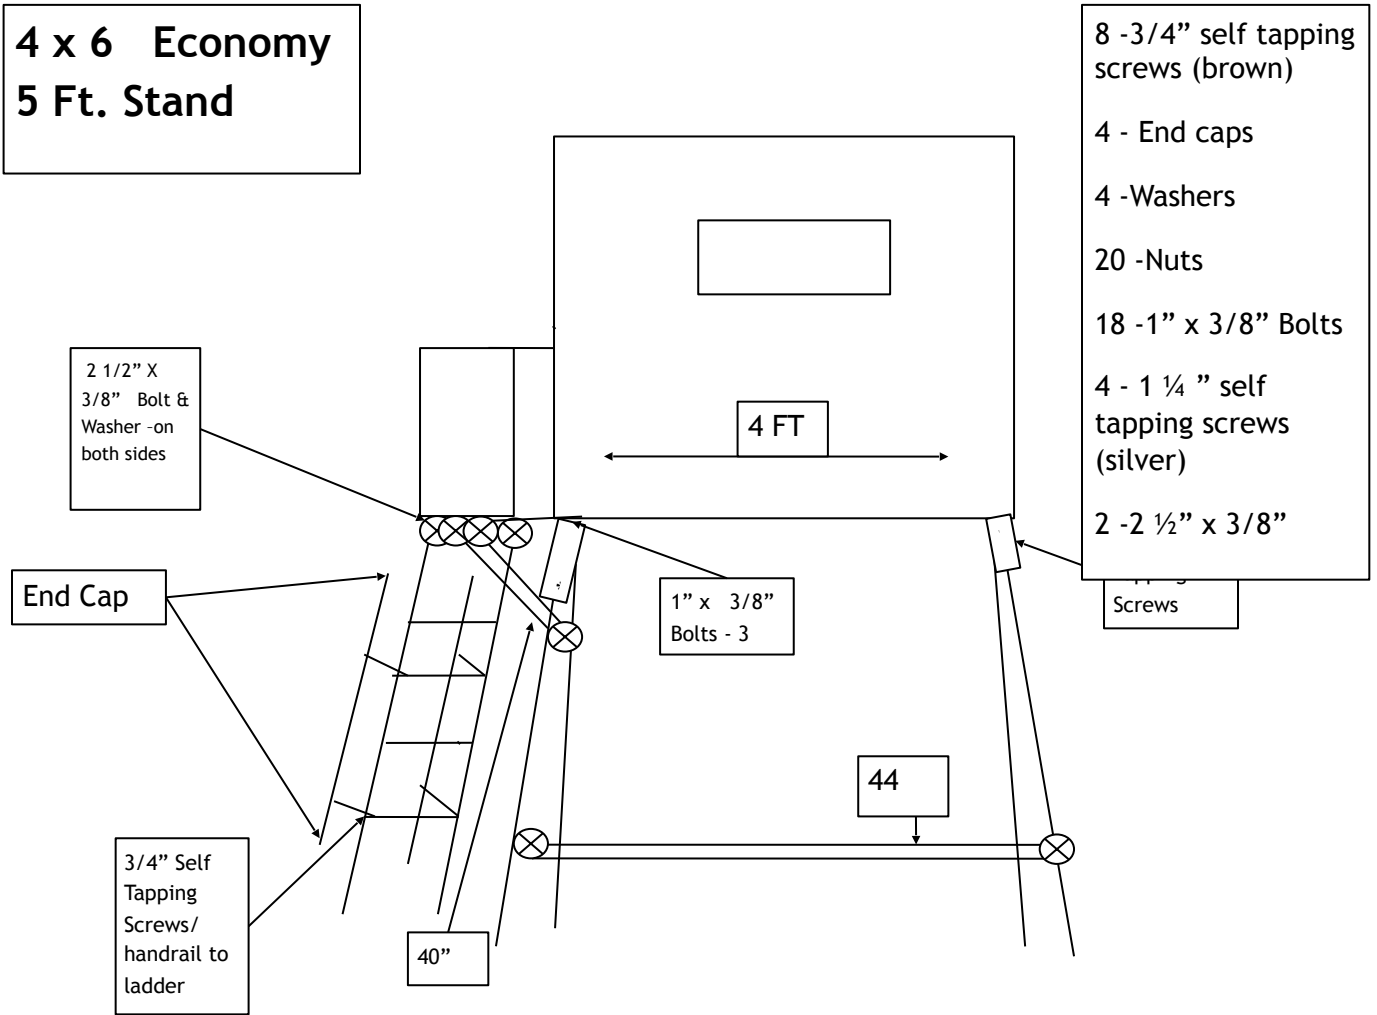

- Bolt Platform in the Slots on Front of Blind; use 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put * 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

Leg#1- Left side of door & Leg#2- Right side of door

- ### Tools Needed
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill

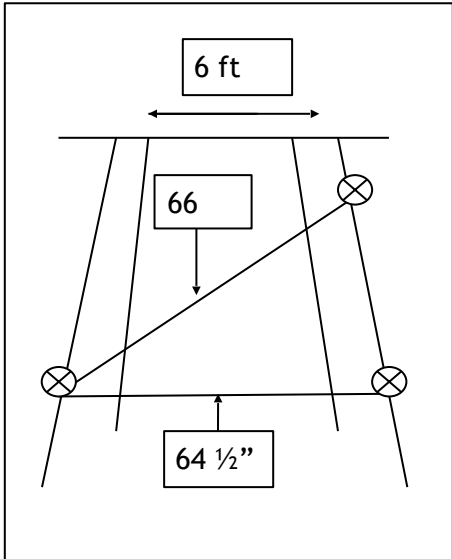


**4 x 6 Economy
8 ft Stand**

- 20 - 1" x 3/8" Bolts
- 2 - 2 1/2" x 3/8" Bolts
- 4- Washers
- 22- Nuts
- 12 - 3/4" self tapping screws (brown)
- 4 - End Caps
- 6 - 1 1/4" self tapping screws (silver)

2 1/2" x 3/8 Bolt & Washer -on both sides

End Caps

3/4" Self Tapping Screws/ handrail to ladder

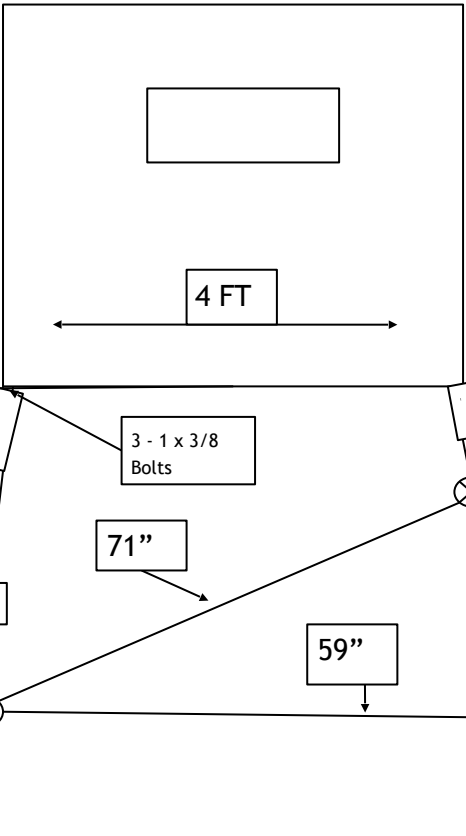

71"

59"

4 FT

3 - 1 x 3/8 Bolts


1 1/4" Self Tapping Screws

Tools Needed

- 9/16 Wrench
- 9/16 Socket and Ratchet
- 3/8 and 5/16 Hex Tips

Leg #1- left side of door & Leg #2 - Right side of door

- Bolt Platform in the Slots on Front of Blind; use 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Legs into Stubs while holding legs, put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts

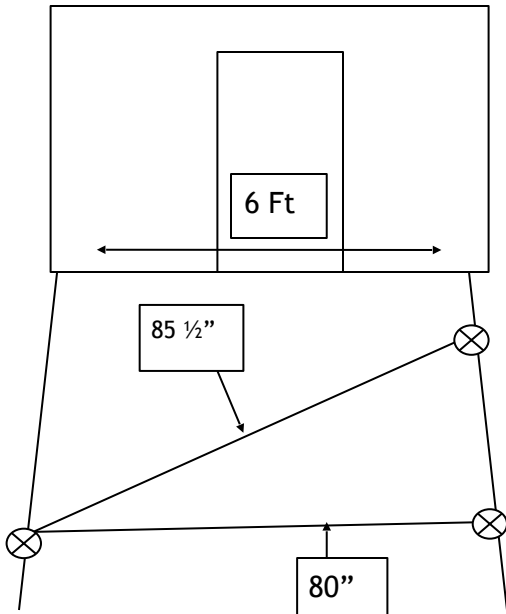


6 Ft

85 1/2"

80"


**4 x 6 10 ft
Economy Stand**

- 24- 1" x 3/8" Bolts
- 26 - Nuts
- 2- 3 x 3/8" Bolts
- 4- Washers
- 4- End Caps
- 20- 3/4" Self tapping screws (brown)
- 8- 1 1/4" Self Tapping

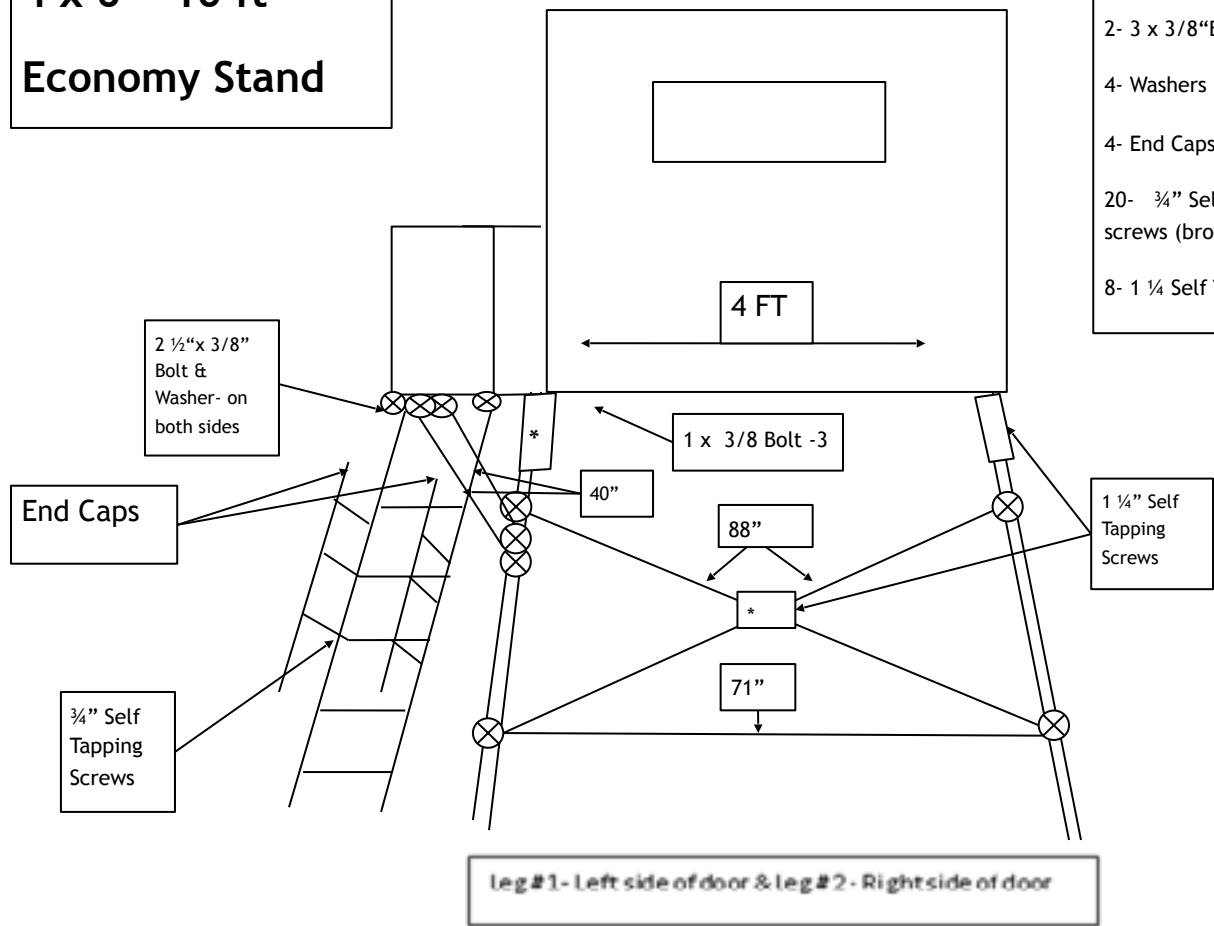


Braces: 4-104, 2-71, 4-88, 2-94 & 2-40

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

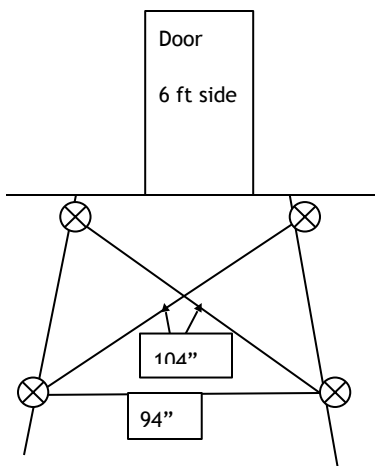

5 x 6 Economy


5 ft Stand

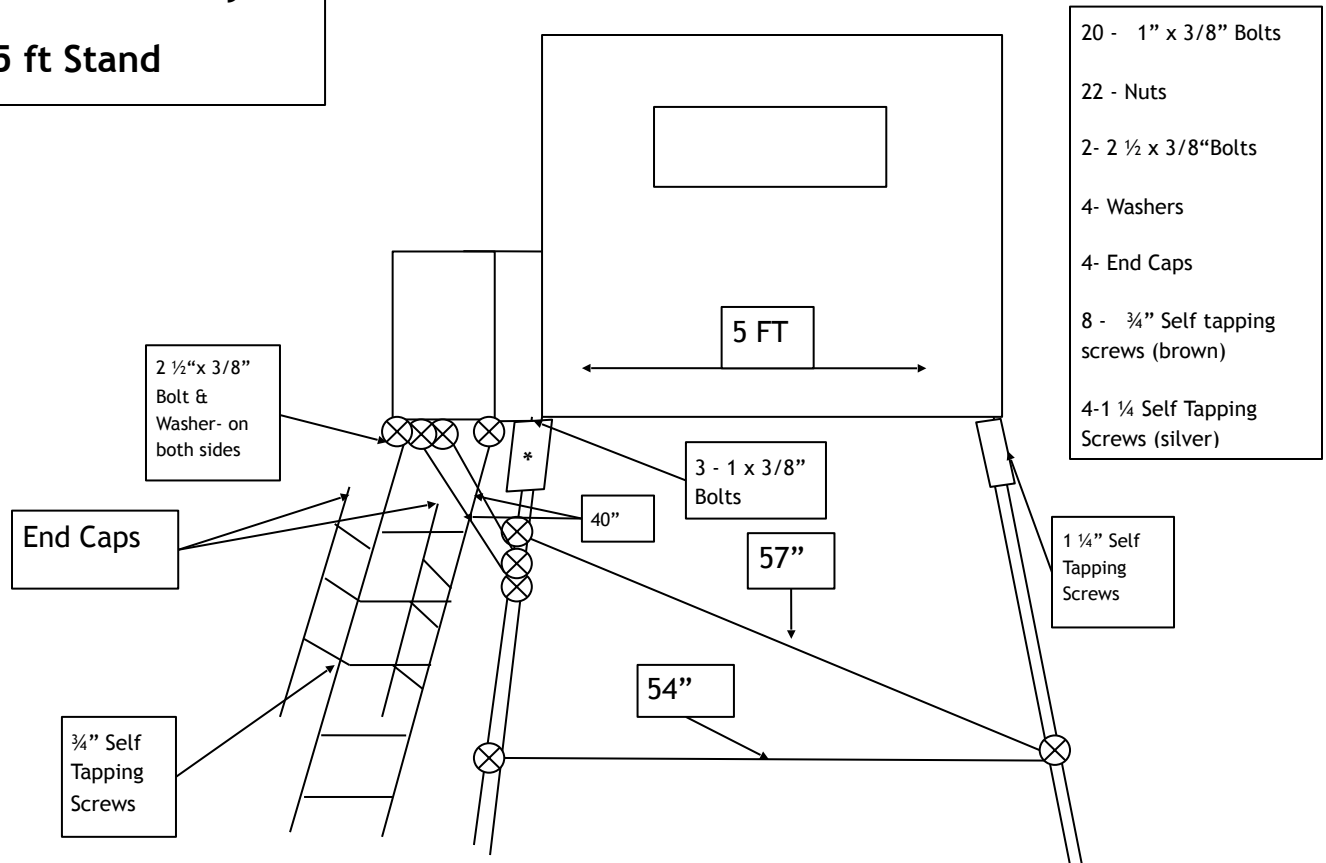

Leg # 1- Left side of door & Leg # 2 - Right side of

Braces: 2-66, 2- 64 1/2, 2-57, 2-54 &


- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

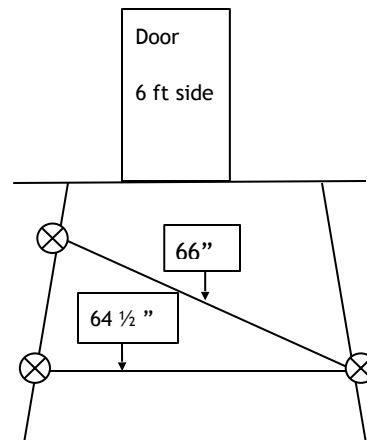

Tools Needed

- 9/16 Wrench
- 9/16 Socket and Ratchet
- 3/8 and 5/16 Hex Tips

**5 x 6 Economy
8 ft Stand**

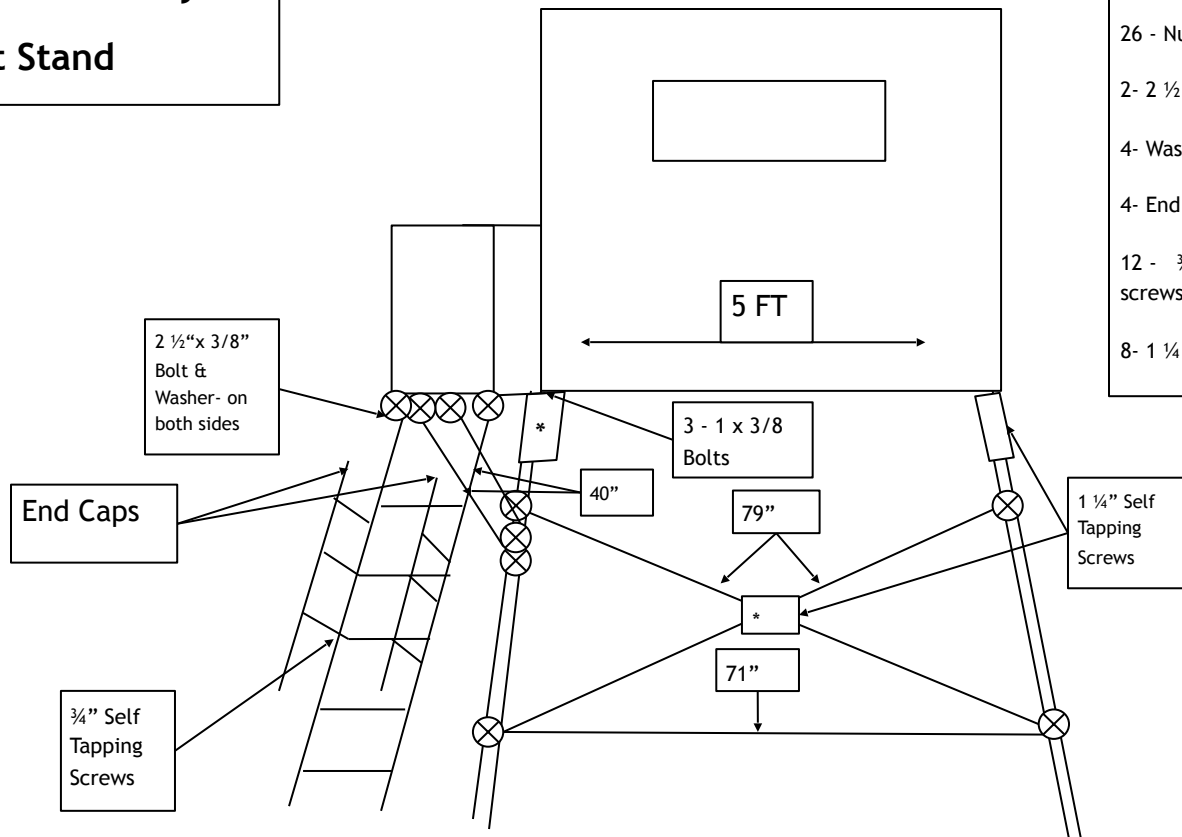


- 24- 1" x 3/8" Bolts
- 26 - Nuts
- 2- 2 1/2 x 3/8" Bolts
- 4- Washers
- 4- End Caps
- 12 - 3/4" Self tapping screws (brown)
- 8- 1 1/4" Self Tapping


Leg#1- Left side of door & Leg#2 - Right side of door

Braces: 2-80, 4- 85 1/2, 4-79, 2-71 &

- Bolt Platform in the Slots on Front of Blind; use 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

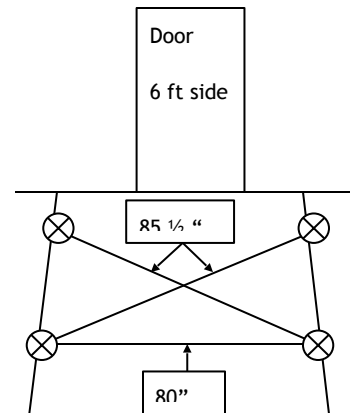


5 x 6 Economy 12 Ft Stand

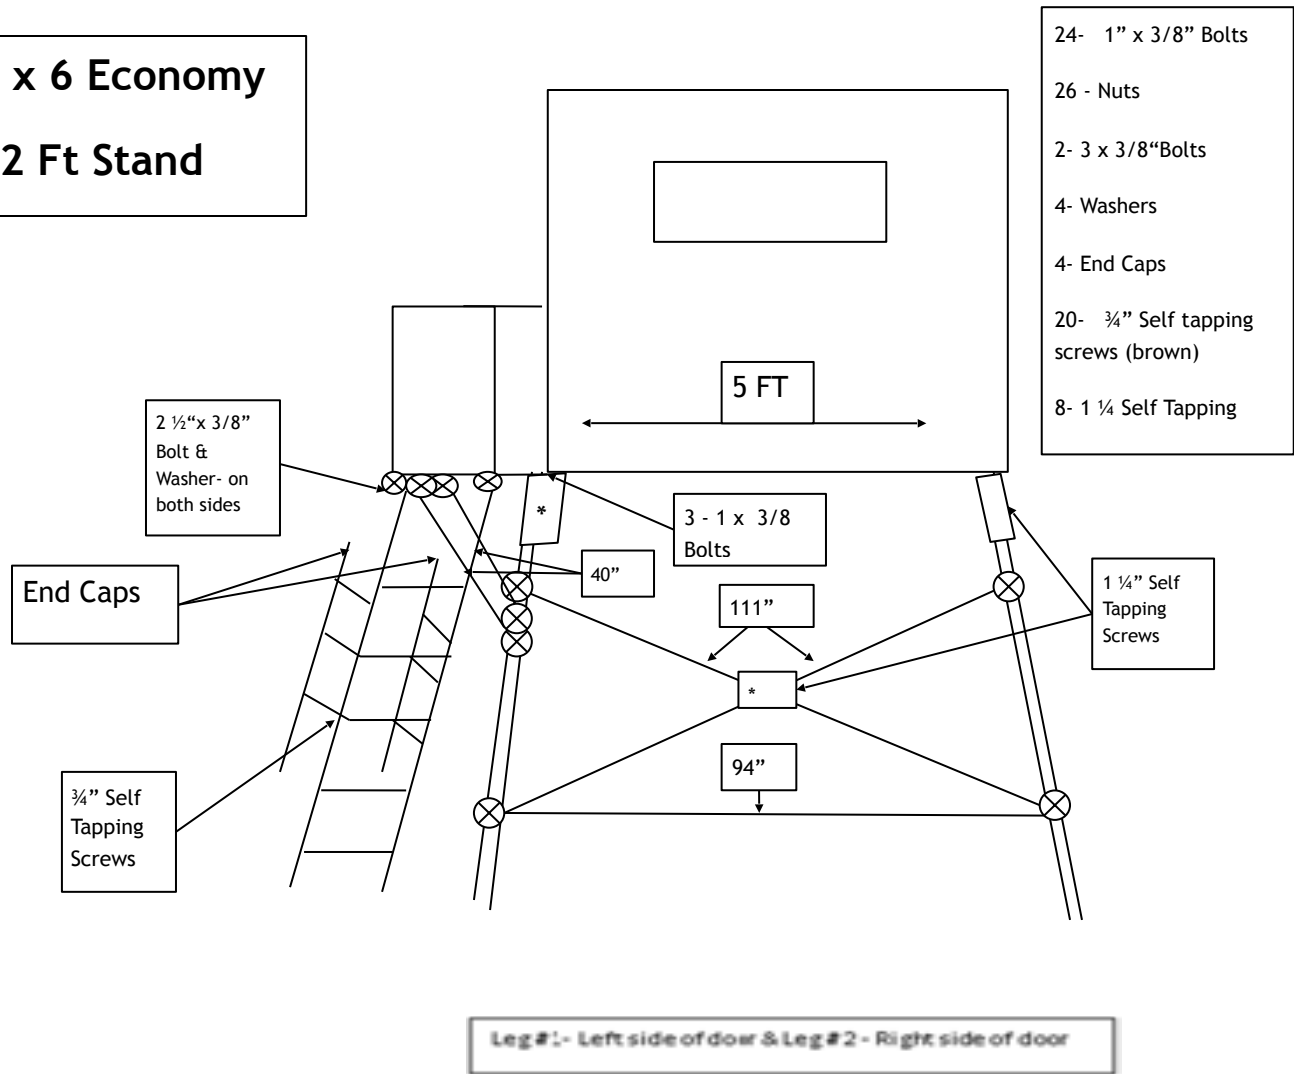


Braces: 4-118 1/2, 2-104, 4-111, 2-94 &

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

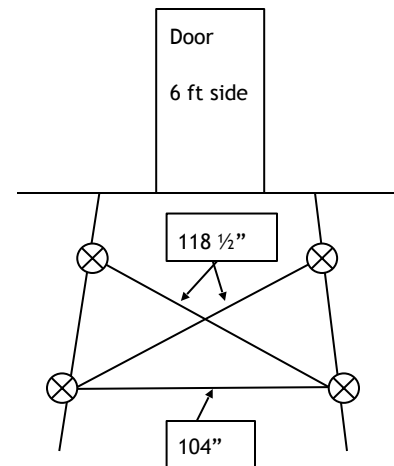


6 x 6 Economy

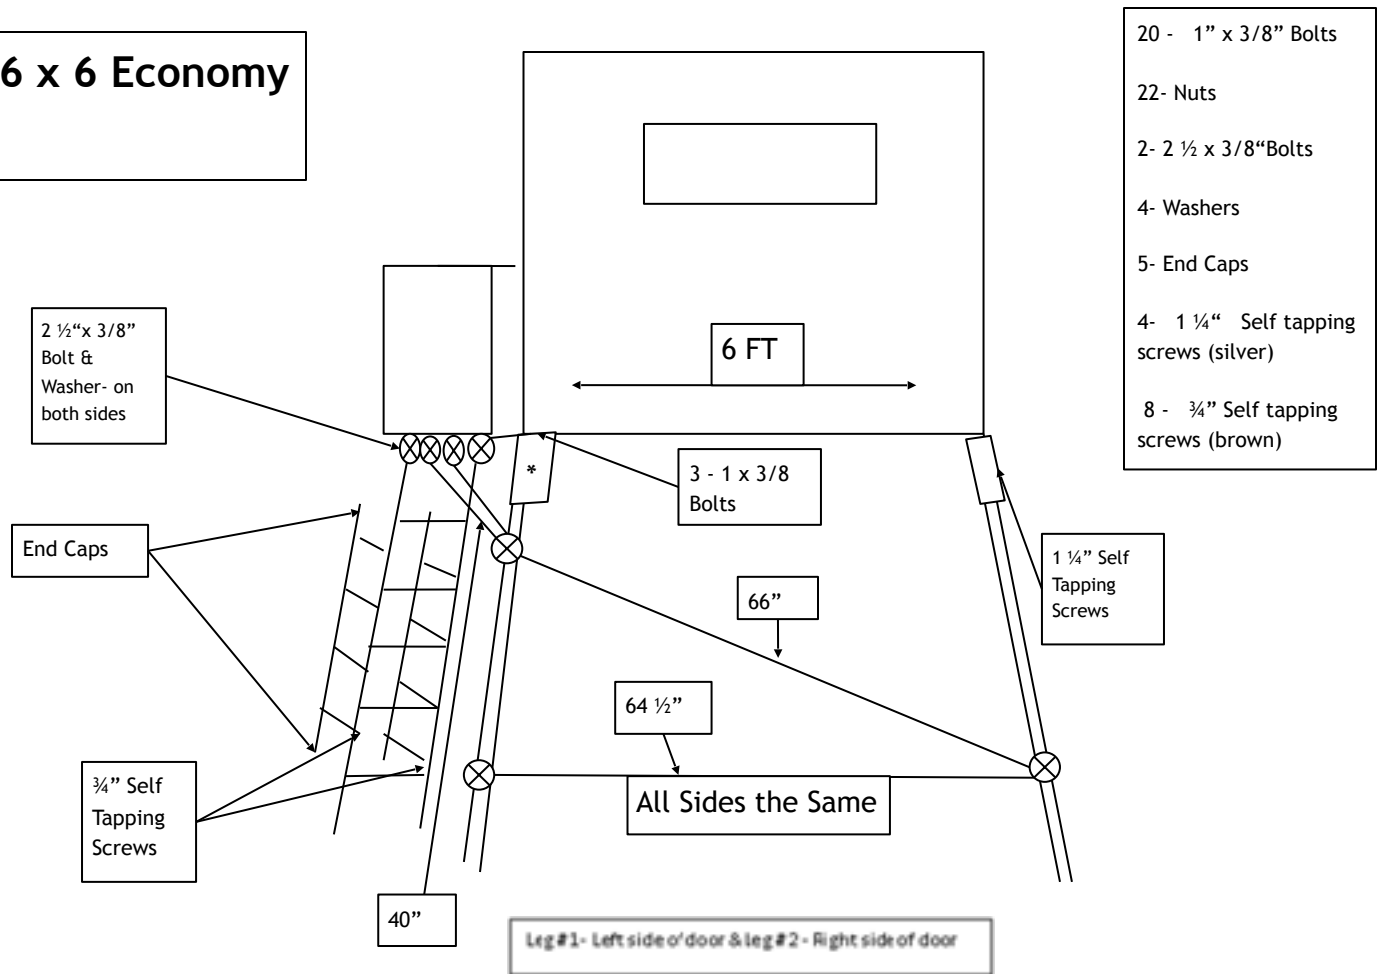

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolt thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail

- Tools Needed**
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips

6 x 6 Economy 8 Ft. Stand

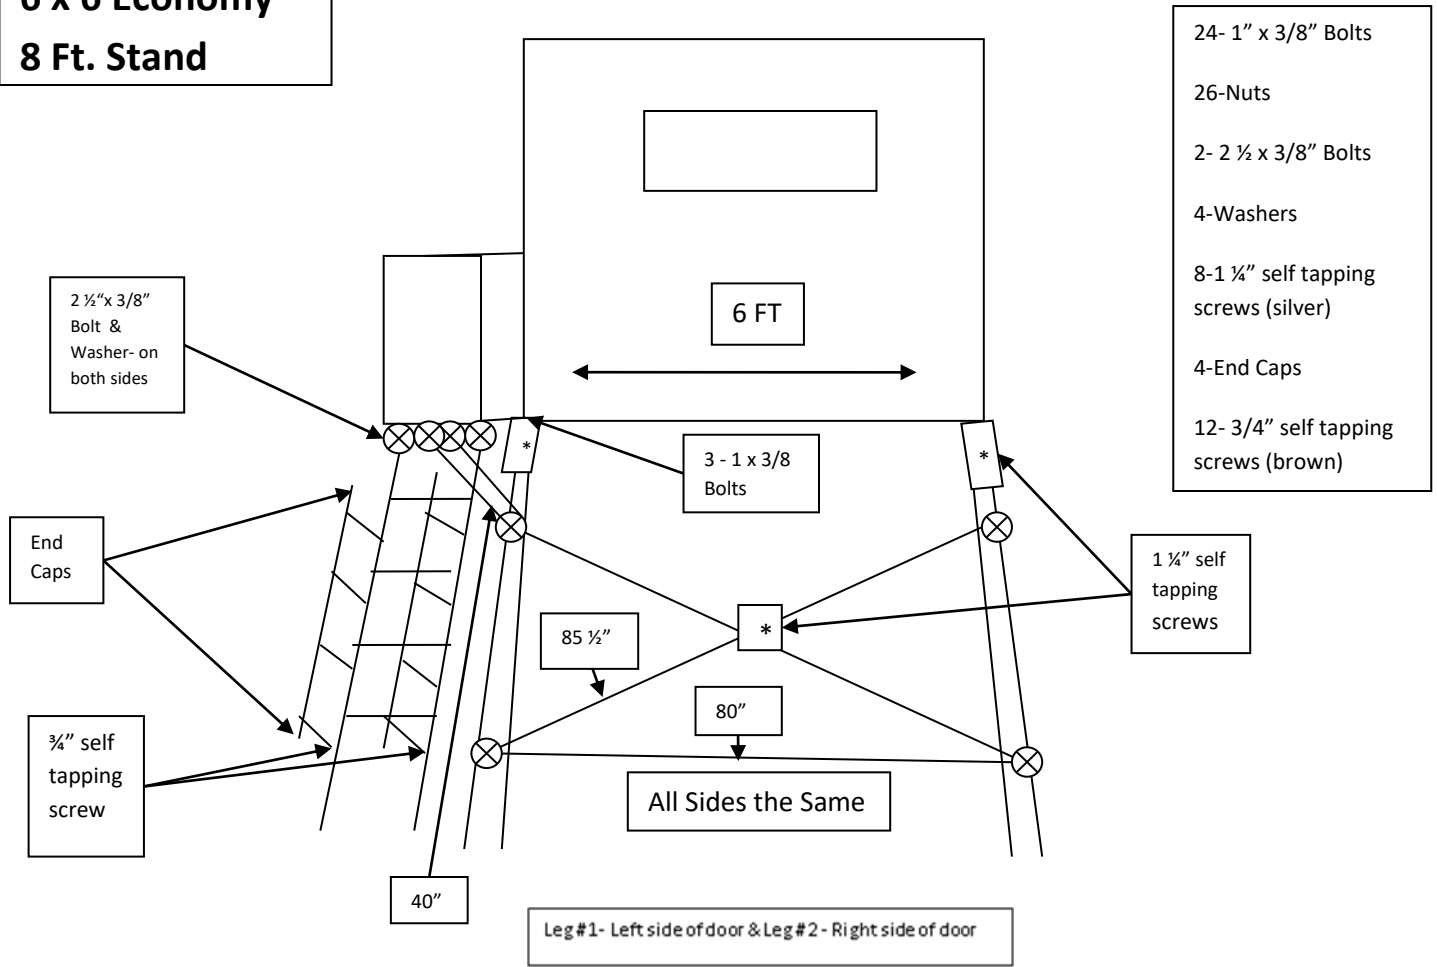


- 24- 1" x 3/8" Bolts
- 26-Nuts
- 2- 2 1/2 x 3/8" Bolts
- 4-Washers
- 8-1 1/4" self tapping screws (silver)
- 4-End Caps
- 12- 3/4" self tapping screws (brown)

- Bolt Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail
- Raise Ladder and Fasten.
- -- Marks 1" x 3/8" Bolts
- ⊗ Marks Self Tapping Screws

- Tools Needed
- 9/16 Wrench
 - 9/16 Socket and Ratchet
 - 3/8 and 5/16 Hex Tips
 - Cordless Drill

6 x 6 Economy 12 Ft. Stand

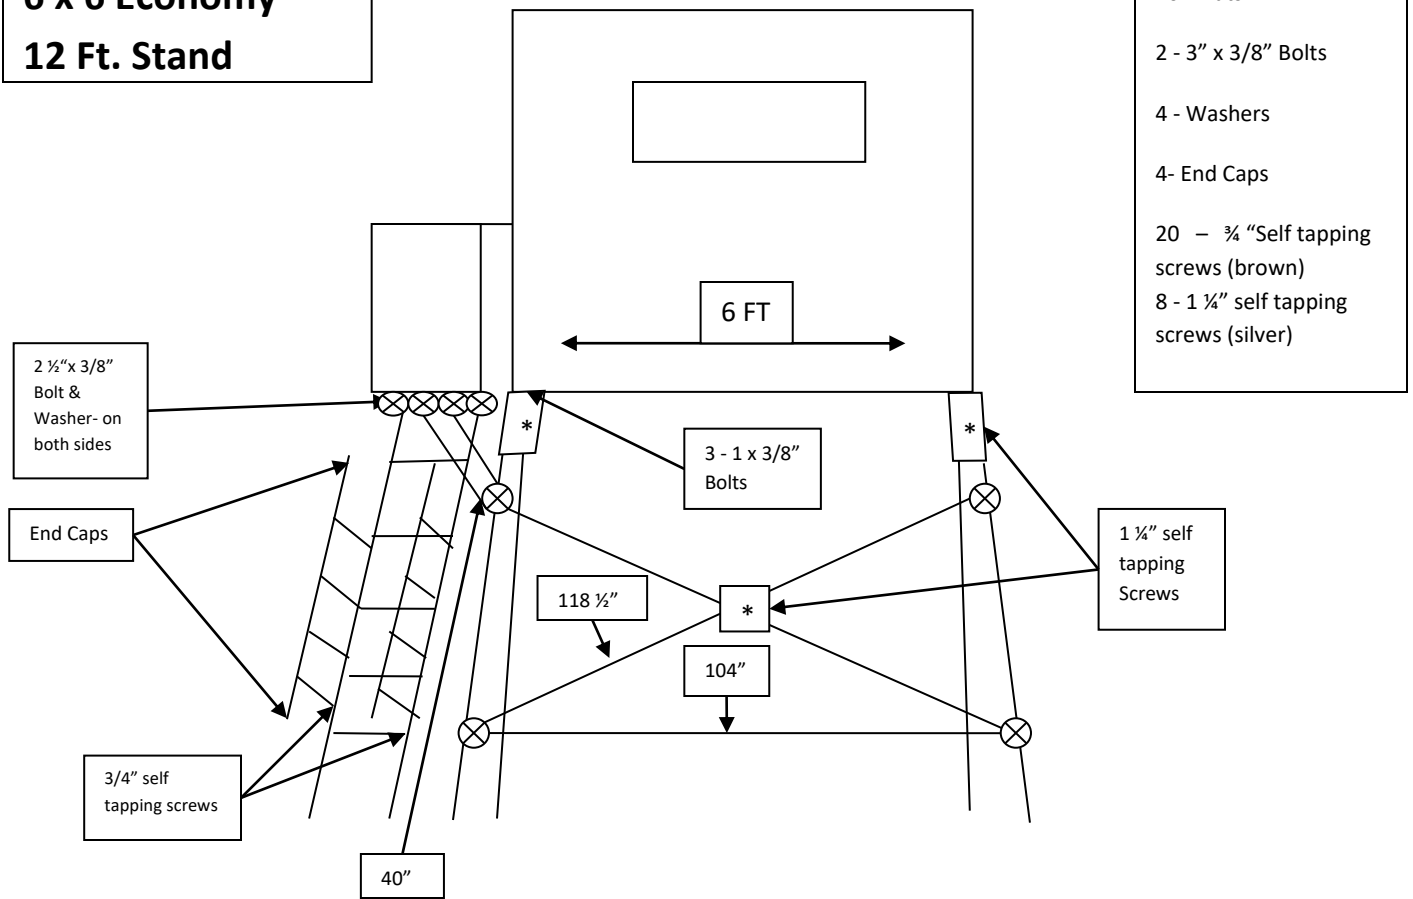

Leg #1- Left side of door & Leg #2 - Right side of door

- Bolts Platform in the Slots on Front of Blind; use 3 - 3/8 x 1" Bolts thru angle.
- Raise blind
- Slide Leg into Stub, while holding leg put 1 1/4" Screws through Stubs into leg.
- Leave Blind 2" off Ground, Install Braces leaving all Bolts Loose.
- Lower Blind
- Pull Out on all Legs settling the Blind.
- Tighten All Bolts
- Install handrail
- Raise Ladder and Fasten.
- ⊗ - - Marks 1" x 3/8" Bolts
- * -Marks Self Tapping Screws

Tools Needed

- 9/16 Wrench
- 9/16 Socket and Ratchet
- 3/8 and 5/16 Hex Tips
- Cordless Drill